


TO DWM IV MTB-J6

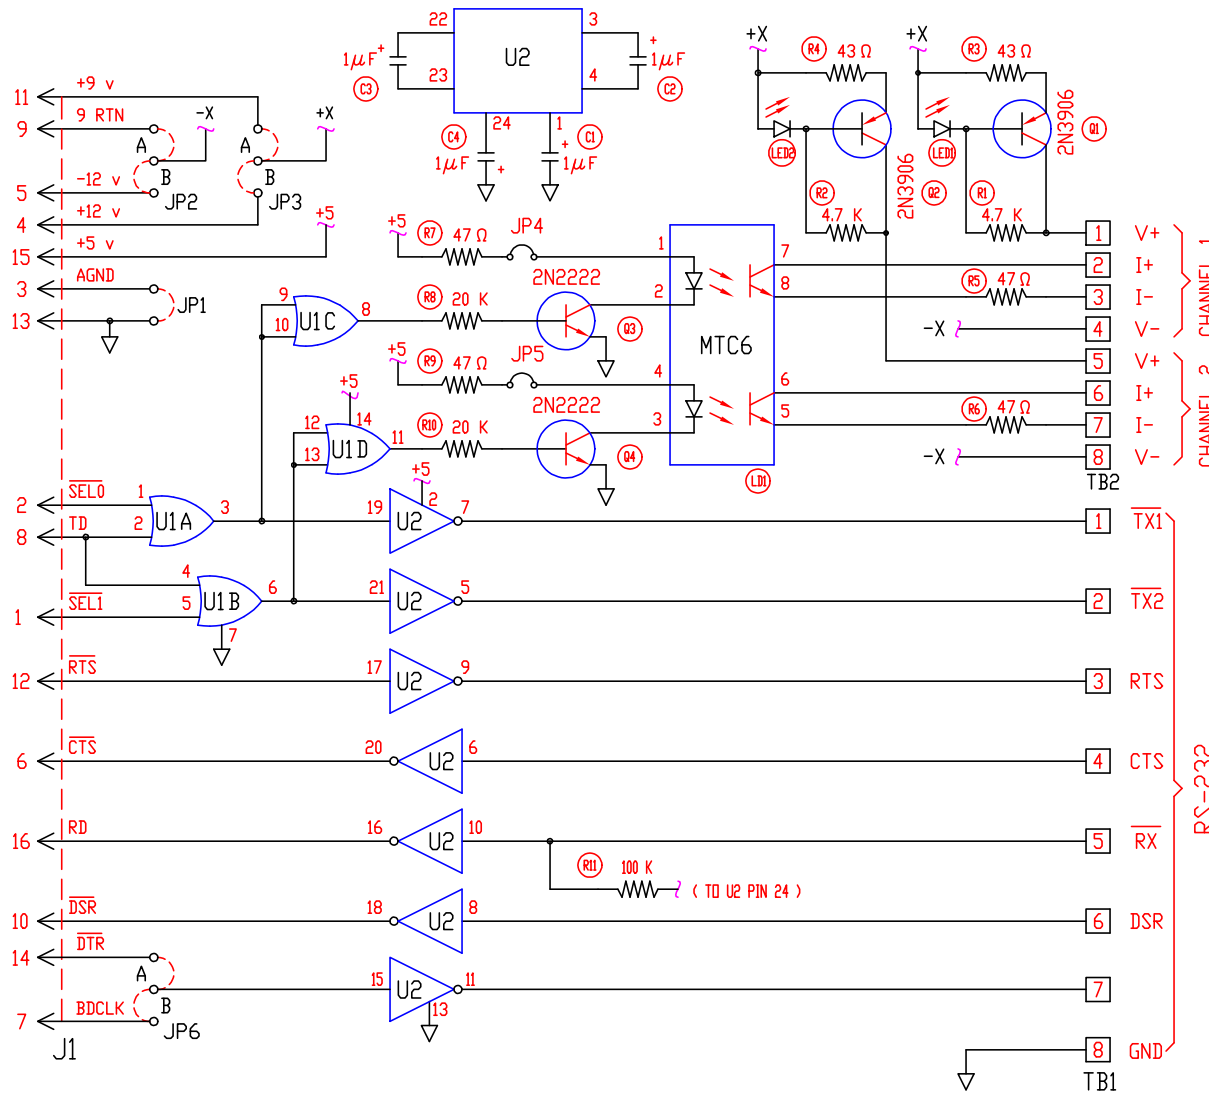

NOTES:

- JP2 & JP3 MUST BE SET TO THE SAME POSITION
- "A" = 9V CURRENT LOOP
- "B" = 24V CURRENT LOOP
- JP4 = CHANNEL 1 CURRENT LOOP ENABLE
- JP5 = CHANNEL 2 CURRENT LOOP ENABLE
- U1 = 74HC32
- U2 = LT1134

TOLERANCE UNLESS OTHERWISE SPECIFIED .X ± .XX ± .XXX ± DEC. ± FRAC. ± ANG. ±	APPROVALS	DATE	flex-weigh corporation SANTA ROSA, CALIFORNIA 95403		
	DRAWN.	J. Botto			18 FEB 97
	CKD.		TITLE	DUAL RS 232 CURRENT LOOP INTERFACE	
	ENG.		SCALE	SIZE	DWG. NO.
JOB #		B		EB 3047C	
CAD FILE NAME: E3047C			DO NOT SCALE DRAWING		SHEET