


150 In. 128 In.

For all Molex connectors:
Solder splice 2 wires onto one wire each, then Cover solder joints with 1" pieces of HS1 1/4B Then cover both with a 2" piece of HS ATUM12/3

L1,L2
F2 MOLEX
Housing = 03-09-1022
Contacts = 02-09-1102
CRIMP & SOLDER CONTACTS BEFORE INSERTING

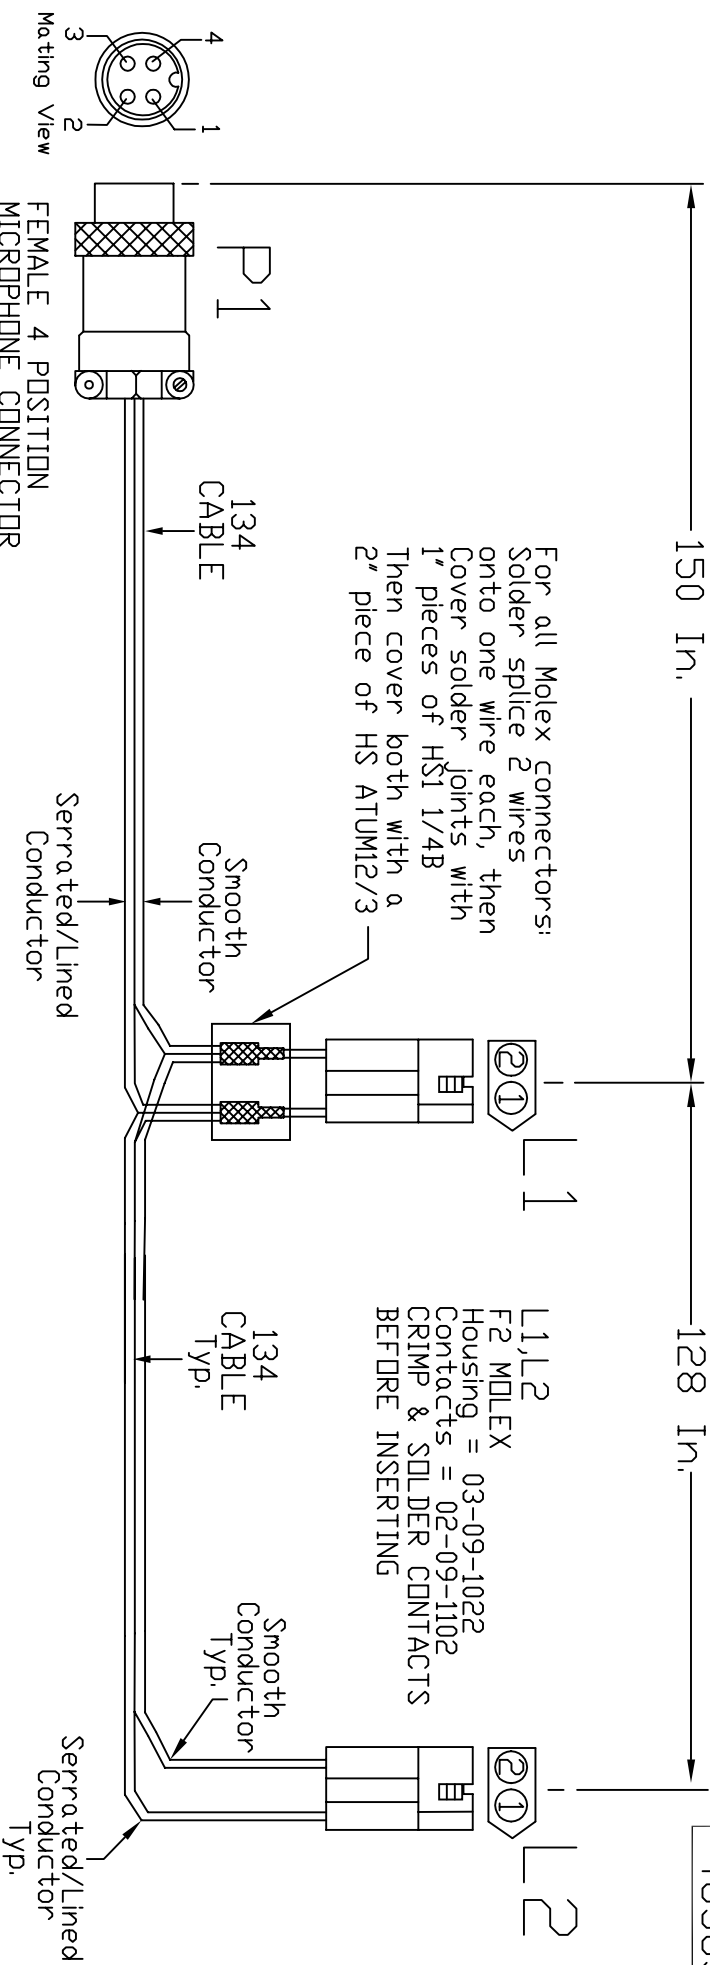

P1
134 CABLE
FEMALE 4 POSITION MICROPHONE CONNECTOR MCP416

WIRE CONFIGURATION

P1	L1	L2
4 pos.	2 PDS.	2 PDS.
Serrated/Lined Conductors		
1	1	1
Smooth Conductors		
3	2	2
SOLDER ALL MOLEX CONNECTIONS		

NOTES:

1. See BOM 46365 for materials.
2. Label cable 12" from P1 Connector as shown:

Custom Cable Industries 800-446-2232 customcable.com	PART NUMBER 46365-150-IN-995 REV A JOB#
--	--

UNLESS SPECIFIED
TOLERANCE:
0-18 inches - +/- 1/2"
Over 18 inches +3% / -2%

ASSEMBLY:
CABLE LENGTH IS END TO END
CCI Label is 6" from P1

Custom Cable Industries 800-446-2232 customcable.com	PART NUMBER Base-Left-File Description Text REV # Datecode
A	Released drawing

DRAWING IS NOT TO SCALE

LET ECN NO.

DESCRIPTION OF CHANGE

DATE

BY

APPROVALS
C. Pacinello 05 02 03
Checked
Approved
Other

THIS DRAWING MAY CONTAIN PATENTED OR PROPRIETARY INFORMATION AND IS THE PROPERTY OF CUSTOM CABLE INDUSTRIES, INC. IT MAY NOT BE REPRODUCED OR TRANSMITTED IN ANY FORM WITHOUT THE WRITTEN CONSENT OF CUSTOM CABLE INDUSTRIES, INC. ACCEPTANCE OF THIS DRAWING ESTABLISHES AN AGREEMENT OF THE FOREGOING.



Excellence in Communications Connectivity
Data And Voice

Title/Description
DPS - 2 TIER
POWER BACKBONE CABLE

Part Number
46365-150-IN-995

Size
A

Drawing No. 46365

Rev. A
Sheet 1 of 1